




# HO Structure Kit JEWELRY STORE 933-3476

Thanks for purchasing this Cornerstone Series® kit. Please read all instructions and study the drawings before starting — directions for the interior graphics are printed directly on that sheet. All parts are styrene plastic, so use compatible glue. If you wish to decorate your model, use paints for plastic models. With appropriate details and signs, your finished model fits almost any era.


Since ancient times humans have worn all kinds of natural adornments including shells, bone, wood, stones and metals. These sometimes were simply for decoration, but often served as a display of an individual's wealth and power or for protection from evil. Learning to work, reshape and combine various materials into jewelry gradually became both art and science in virtually every culture on Earth. This also established the beginnings of the jewelry industry, including efforts to acquire and transport raw materials, the work needed to convert them into decorative objects, and their value as trade goods. With time, the craft of shaping and forming jewelry became the work of highly skilled artists, who required a place to store, protect and sell their products, as well as a shop to make them. The industrial revolution brought about large-scale mining operations and mass-produced items, expanding both sales and the types of merchandise available from jewelry stores, which are still an important business in many communities.

For more Cornerstone Series® kits as well as additional details to complete your scene, see your hobby shop, check out the latest Walthers HO Model Railroad Reference Book and our Website at [waltherscornerstone.com](http://waltherscornerstone.com).

1. Glue Window and Door Frames to each Wall as shown. Glue Window Glass in place as shown. At this time, the printed window sheet for the 2nd and 3rd floor can be added. Use a little white glue to adhere to the back of the windows.
2. Carefully trim any flash from the back of the Cornice (16). Glue Cornice (16) to the front top of the Front Wall (15). There is a lip on the back of the Cornice that will sit on top of the Front Wall (15).

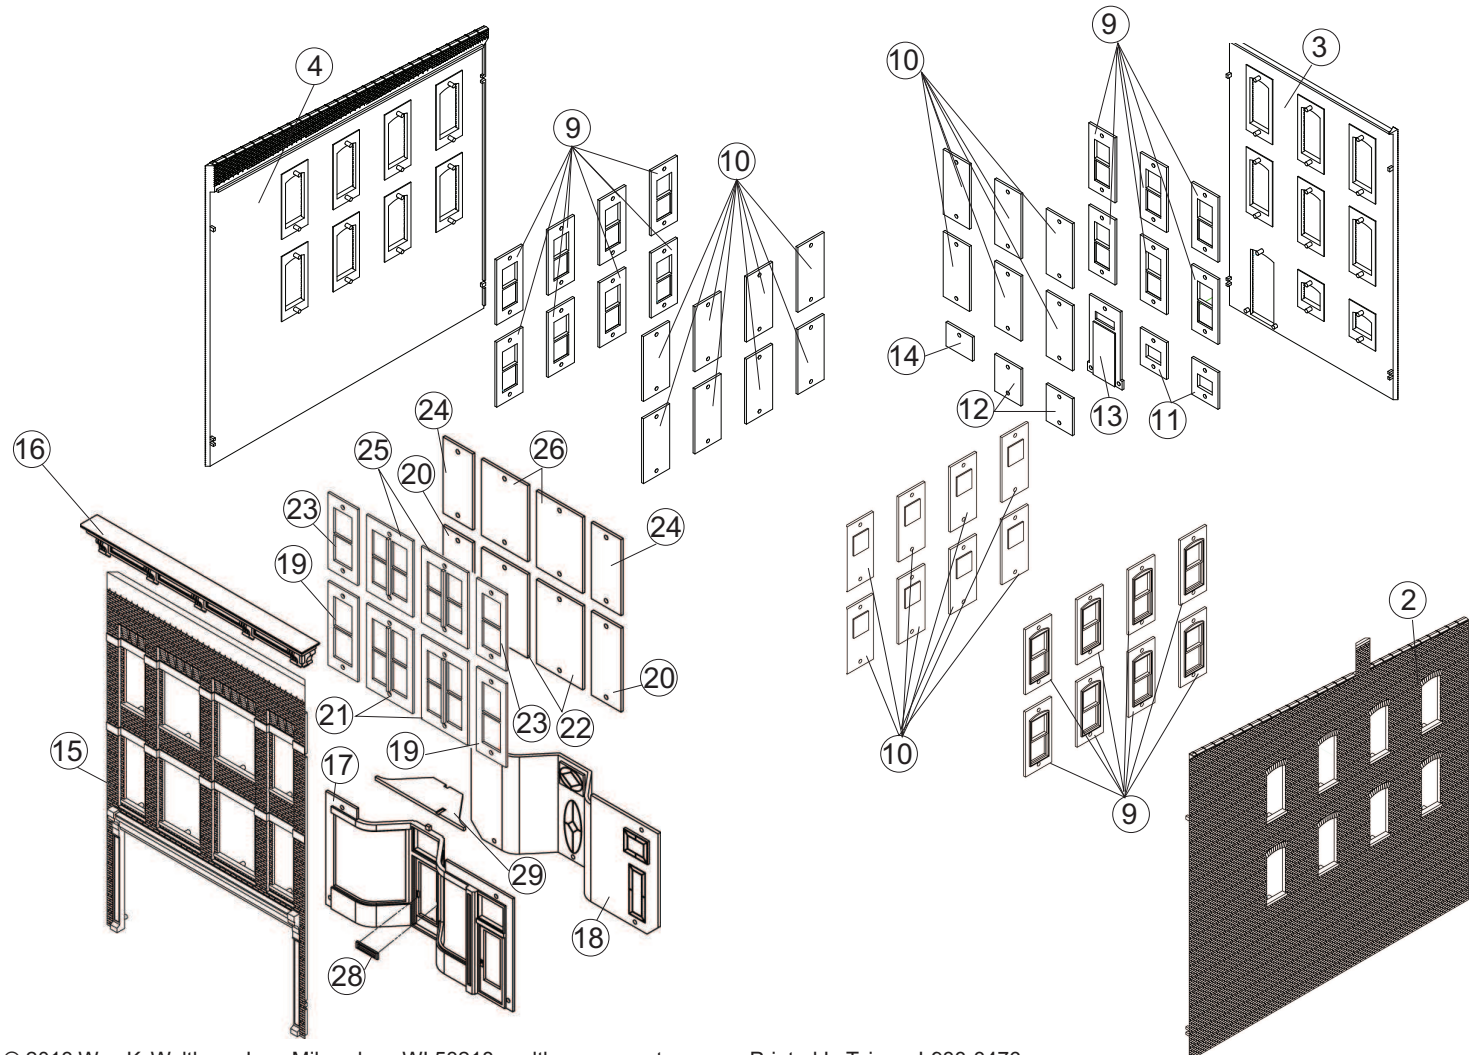

3. Glue the 4 Wall Assemblies (15, 2, 3, 4) to the Roof (27).
4. Glue three Chimney Sides (5, 6, 7) together. Then glue Chimney Assembly to Side Wall (2) to complete the four sides of the Chimney.
5. Glue the Chimney Cap (8) to top of Chimney Assembly.
6. The finished structure can be set on the Base (1) if you wish to add interior details at a later time, or glued in place to complete construction.
7. Install the printed storefront. The shop interior folds up where the "flooring" shifts from square to perspective. Cut away the portion for the entryway.

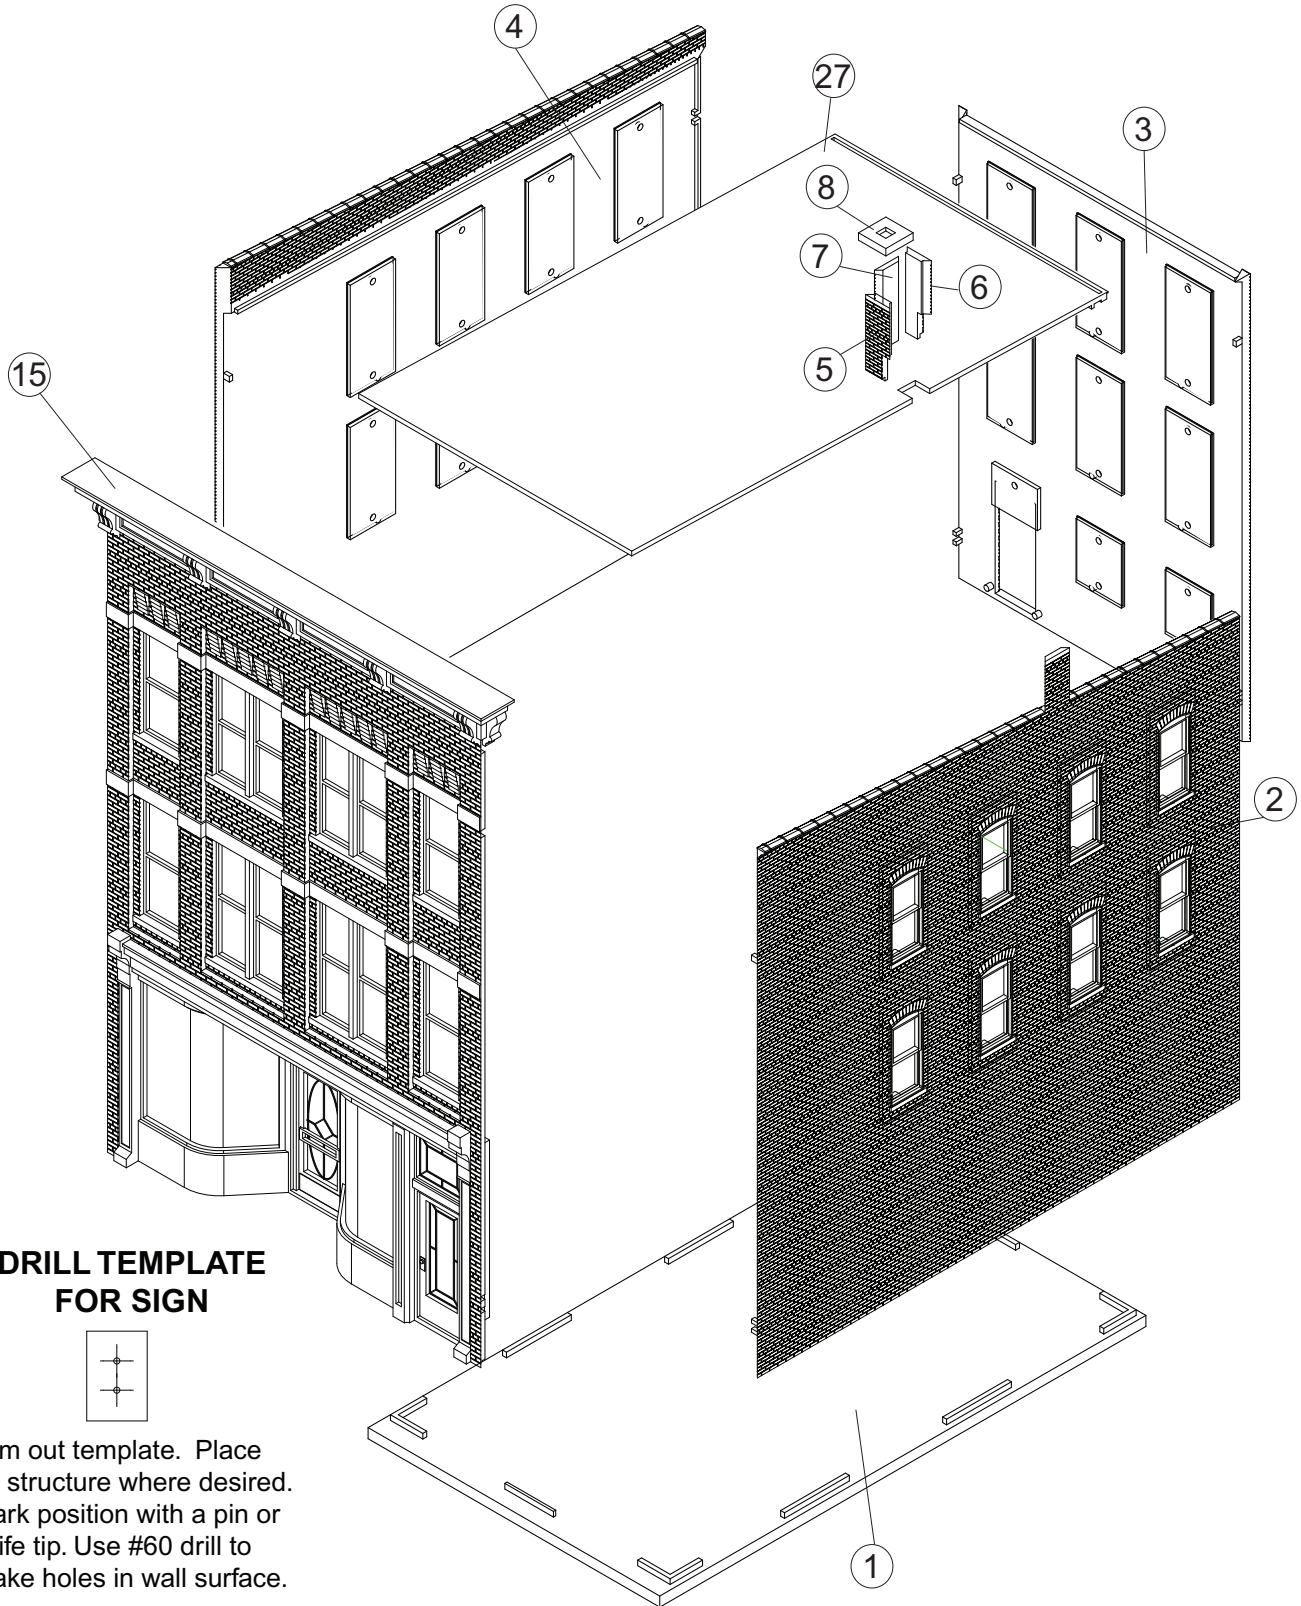

**DRILL TEMPLATE FOR SIGN**



Trim out template. Place on structure where desired. Mark position with a pin or knife tip. Use #60 drill to make holes in wall surface.

**SIGNS**

To mount signs, simply cut the desired name and, using a small drop of white glue on the back, glue it in place.